

CHARGING STATION
«TRAVEL CHARGER»



User manual

© Copyright

This documentation with all illustrations is the intellectual property of PC "AE FACTORY". All documentation is provided to the user for personal use only. This documentation may not be reproduced or provided to others without our written permission. Any violation of the law will be prosecuted.



Read the user manual (Manual) carefully before using the product. All information, illustrations, tables, specifications and diagrams contained in these Manual were carefully compiled at the time of publication. Under no circumstances will compliance with the information in this Manual relieve the user of his responsibility to comply with all applicable codes, safety standards or wiring regulation. The developer cannot be held liable for any direct or indirect damages resulting from the use or operation of the electrical circuits of the equipment or software described in the Manual.

The software is developed and installed exclusively for the operation of the station. The user is strictly prohibited from making any changes, transformations or copying the software.

The developer reserves the right to make any changes in the Manual at any time without prior notice.

CONTENTS

- IMPORTANT SAFETY INSTRUCTIONS** 4
- 1. GENERAL INFORMATION** 6
 - 1.1 INTRODUCTION 6
 - 1.2 FUNCTIONAL POSSIBILITIES 6
 - 1.3 TECHNICAL CHARACTERISTICS 7
 - 1.4 CONNECTORS CHARACTERISTICS 8
 - 1.5 CHARGING STATION MODIFICATIONS 9
- 2 PACKAGE** 9
- 3 MARKING** 10
- 4 INSTALLATION** 11
 - 4.1 OPERATING LIMITATIONS 11
 - 4.2 STATION INSTALLATION 11
 - 4.3 STATION CONNECTING 12
- 5 OPERATION** 13
 - 5.1 OPERATING MODES AND ELECTRIC VEHICLE CHARGING PROCESS 13
 - 5.2 CONNECTING THE VEHICLE 14
 - 5.3 SAFETY MEASURE 14
- 6 MAINTENANCE** 15
- 7 TROUBLESHOOTING** 16
- 8 STORAGE** 17
- 9 TRANSPORTATION** 17
- 10 DISPOSAL** 17
- 11 FAT CERTIFICATE** 18
 - 11.1 ADDRESS OF MANUFACTURER: 18
- 12 LIMITED PRODUCT WARRANTY** 18

IMPORTANT SAFETY INSTRUCTIONS

This operating manual includes the necessary sections of technical characteristics, maintenance rules, as well as safety instructions and recommendations for the operation of the station.

Before starting work, it is necessary to carefully study all the rules and recommendations given in the instructions, and observe them during operation. This will ensure reliable operation of the product and its safety in use.

Work with the charging station, observe the safety recommendations in this manual, as well as the applicable local safety regulations and general safety regulations.

Before starting any work with the charging station, make sure that the instructions, in particular the safety section and the corresponding safety instructions, have been fully read by the personnel and fully understood.

Important safety instructions in this manual are indicated by symbols. These safety instructions must be strictly followed. You should always pay attention to them and follow the safety requirements to avoid accidents, personal injury or property damage.



WARNING!

Risk of injury or death.

This symbol indicates instructions that must be followed to avoid injury, trauma or death.



ATTENTION!

Risk of material damage.

This symbol indicates instructions which, if not followed, may result in material damage, functional faults and/or breakdown of the station or the vehicle connected to it.



WARNING!

Danger - electrical current.

This symbol alerts you to potentially dangerous situations involving electric current. Failure to follow the safety instructions increases the risk of serious injury or death. Caution should be exercised, especially during maintenance and repairs.



ATTENTION!

This symbol indicates tips and information that should be adhered to in order to ensure efficient and reliable operation of the product.

Strict adherence to the safety procedures described in these operating instructions and special care when using the equipment are essential to prevent and reduce the likelihood of injury or damage to the equipment.

The manufacturer is not responsible for any direct or indirect damages resulting from the use or work with the electrical circuits of the equipment or software described in this manual.

The manufacturer is not responsible for damage and/or malfunctions caused by non-compliance with the instructions in this manual.

The manufacturer will not be liable for any personal injury or material damage, whether indirect or special, consequential, loss of business profits, business interruption or loss of business information resulting from the use of the equipment described in this manual.

In connection with non-stop improvements, the Developer reserves the right to make changes to the construction of the equipment described in this manual without prior notice.

1. GENERAL INFORMATION

1.1 INTRODUCTION

TRAVEL CHARGER – is a DC charging station designed for safe and efficient charging of electric vehicles at home or at the specially equipped places (car parks, offices, shopping malls, etc.). It can be installed indoors or outdoors. The station can also be used while traveling. The compact design of the charger makes it easy to fit into the trunk of a car.

The charging station is equipped with an intellectual control system that handles communication between the station and the electric vehicle. The control and protection functions operate continuously in the system.

The station is available in several modifications. All modifications are equipped with one fixed cables with CHAdeMO / CCS Type 1 / CCS Type 2 / GB/T DC connectors.

1.2 FUNCTIONAL POSSIBILITIES

Mount	Wall / Floor
Online monitoring of device operation*	+
Possibility to adjust the charge current*	+
Possibility to set the tariff*	+
Single body execution	+
Electricity consumption indication	+
User interface management*	Menu functions are controlled via the app
Emergency stop button	+
Power cable entry	Left side
Enclosure material	Aluminum with anticorrosive coating

* these functions are available for stations with a modem only

1.3 TECHNICAL CHARACTERISTICS

Charging mode according to IEC 61851-1	Mode 4
Nominal input voltage	400 V ± 10%, 3 ph (TN-S)
Nominal frequency	50 / 60 ± 0,2 Hz
Maximum station power	30 kW / 40 kW
Display	LED-display (20×2 symbols)
Charging station options*	RFID-card (IEC 14443-1); Smartphone app; Chip-tag (extra option)
Mechanical protection	IK10
Case protection class	IP54
Operating temperature	- 35 °C to + 50 °C
Relative humidity	no more than 95% without moisture condensation
Net mass, kg	48
Charging station dimensions (H×W×D), mm	
Wall mounting	660×360×215(400)
Floor mounting	660(890)×360×270
Communication and protocols*	
2G	GSM GPRS Class 12, Quad-band: 850 / 900 / 1800 / 1900MHz
3G/4G (LTE)	LTE Cat 1, LTE-FDD: B1/B3/B7/B8/B20/B28A; GSM: B3/B8
RFID	ISO 14443 (A) (Mifare)
Ethernet	IEEE 802.3
Wi-Fi	802.11 a/b/g/n
OCPP	OCPP 1.6

* these functions are available for stations with a modem only

1.4 CONNECTORS CHARACTERISTICS

Charging connector	<p style="text-align: center; color: green;">CHAdeMO</p> 	
Maximum power per socket	30 kW	
Maximum current per socket	100 A	
Maximum socket voltage	500 V	
Cable length	5,5 m	
Charging connector	<p style="text-align: center; color: green;">CCS (Type 1)</p> 	
Maximum power per socket	30 kW	40 kW
Maximum current per socket	100 A	120 A
Maximum socket voltage	500 V	1000 V
Cable length	5,5 m	
Charging connector	<p style="text-align: center; color: green;">CCS (Type 2)</p> 	
Maximum power per socket	30 kW	40 kW
Maximum current per socket	100 A	120 A
Maximum socket voltage	500 V	1000 V
Cable length	5,5 m	

Charging connector	GB/T DC 		
	Maximum power per socket	30 kW	40 kW
Maximum current per socket	100 A	120 A	
Maximum socket voltage	500 V	750 V	
Cable length	5,5 m		

1.5 CHARGING STATION MODIFICATIONS

The charging station is available in various configurations, which are formed depending on the connector type and mounting type.

2 PACKAGE

EV charging station Travel Charger can be supplied in various package, depending on the installation method.

Wall mounting	
EV charging station Travel Charger	1
Adapter CEE-plug (5 pin, 63 A) – Type 2 male plug	1
User manual	1
Mounting bracket	1
Anchor screw M8	4
Floor mounting	
EV charging station Travel Charger	1
Adapter CEE-plug (5 pin, 63 A) – Type 2 male plug	1
User manual	1

The station can be branded if it is specified in the contract with the customer.


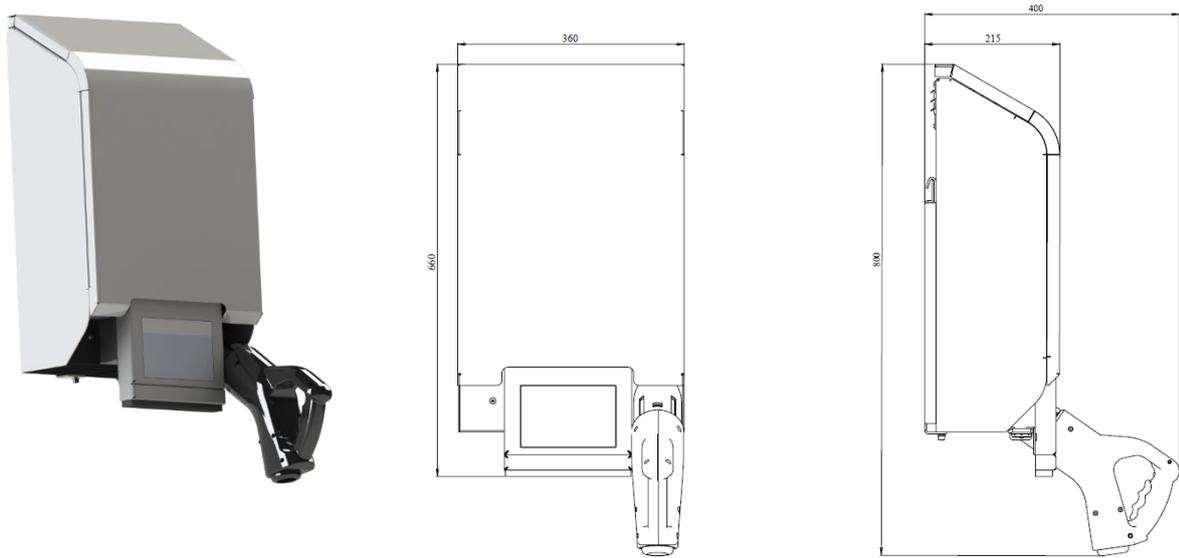


Figure 1a. Station external view and station dimensions for wall mounting

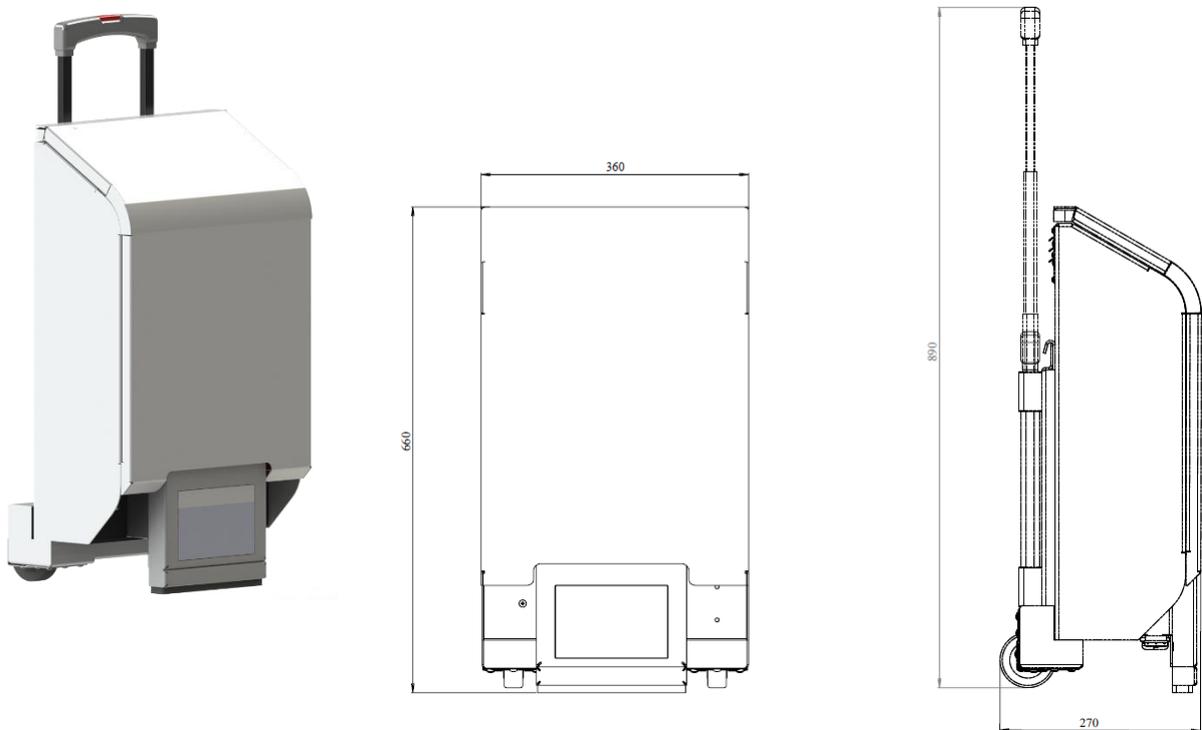

Travel Charge V2

Figure 1a. Station external view and station dimensions for floor mounting

3 MARKING

The nameplate is located on the charging station enclosure side panel. The nameplate specifies information such as the model, serial number and basic technical specifications.

4 INSTALLATION

4.1 OPERATING LIMITATIONS



The charging station is designed exclusively for charging electric vehicles.

Charging only compatible electric vehicles.

Failure to comply with the requirements for operation, maintenance and repair, described in this manual, excludes any liability of the manufacturer in the event of malfunctions in the operation of the station.

The installation altitude of the charging station above sea level should not exceed 2000 m.

Follow the safety regulations to avoid injury and material damage when working with the station.

Before the station installation, you should review this manual carefully and consult with a licensed electrician, contractor, and trained installation expert to insure compliance with local building codes, safety standards and wiring regulations.

4.2 STATION INSTALLATION

Make sure the installation site has relevant GSM or 4G (LTE) cellular coverage. Cellular repeaters may be required to ensure good signal strength in underground garages or other enclosed parking lots.

It is recommended to place the station under a canopy to protect it from direct exposure to atmospheric precipitation and sunlight.

For wall-mounted charging stations, a place must be prepared for attaching the bracket. When choosing the location of the station, keep in mind that there must be a distance of at least 1 meter to the left and right of the station body to any obstacle. The holes for the anchor screws should be positioned as shown in Figure 2.

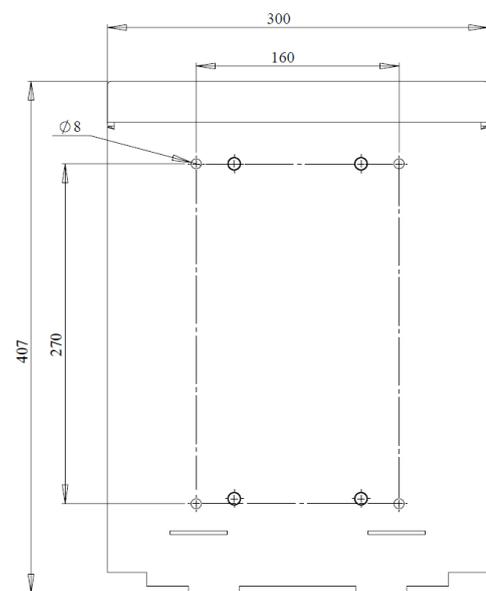


Figure 2. Mounting bracket

**WARNING!**

Only qualified personnel can prepare the connection point for the charging station.

The charging station is connected to a 400 V AC power supply network according to the TN-S scheme (L1 + L2 + L3 + N + PE). When connecting with a 4-wire cable, carry out the protective grounding with a separate wire. It is necessary to install an AC circuit breaker between the station and the power supply network when the power cable laying. It is recommended to use a 4-pole 63 A circuit breaker.

To connect the charging station, it is necessary to prepare a cable installation with a cross-section of at least 5x10 mm² (30 kW) or 5x16 mm² (40 kW) and install a CEE socket (5 pin, 63 A).

4.3 STATION CONNECTING

The charger does not require any special adjustment or tuning before it is put into operation.

**ATTENTION!**

DO NOT SWITCH ON THE CHARGER WITHOUT A CONNECTED GROUNDING!

Non-compliance with this requirement may result in energizing the charger body, electric shock damage to the service personnel and consumers, as well as in a failure of the charger.

To connect the charging station to the electric circuit, it is necessary to put the device power cable plug into the socket and switch the station circuit breakers to the working position. Next, move the external circuit breaker to the operating position.

In the case when the station will connect to the control server, it is necessary to:

- Install mobile operator's SIM-card (if an external SIM-card is used):
 - remove the modem cover;
 - install SIM-card;
 - close the modem cover.
- Move the circuit breakers to the operating position (up).
- Move the circuit breaker on the switch board to the operating position (up).

5 OPERATION

5.1 OPERATING MODES AND ELECTRIC VEHICLE CHARGING PROCESS

Information about the operating modes of the charging station (the state of the connectors and the charging parameters) are shown at the display. Also, the display shows data about software versions, modem number, station number in Autoenterprise billing, mobile network status, etc.

The information shown on the display depends on the software version and may differ from version to version.



After the supply voltage is applied, the station display shows information about the software version and the serial number of the modem.

In case of malfunctions in the operation of the charging station, you must inform the serial number of the modem to the service center for diagnostics and restoration of work.



In standby mode, the display shows information about the status of the connectors.



In car charging mode, the LCD display shows information about charging time, voltage level and current amperage.




The "DC Output" indicator flashes green quickly when the car is charging in DC Mode "CHAdEMO" / "CCS" / "GB/T DC". In this case the LCD display shows information about charging parameters.


5.2 CONNECTING THE VEHICLE

CHAdeMO connector.

CHAdeMO connectors have a lock button.

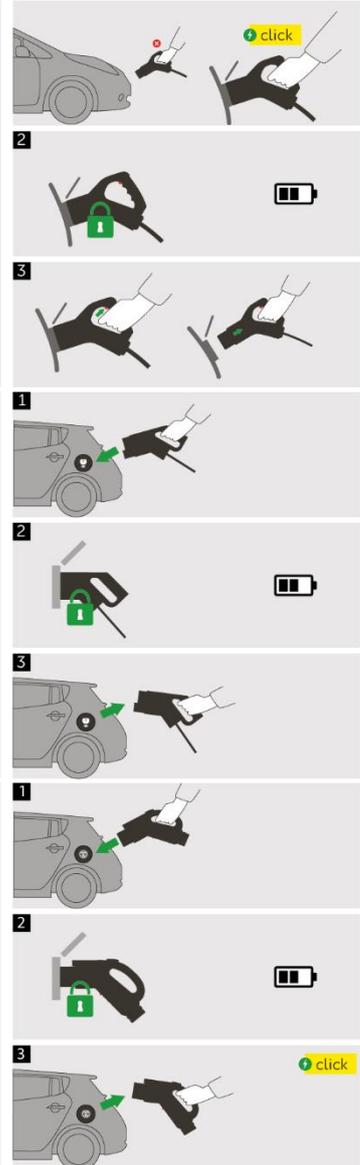

CCS Combo (Type 1 and Type 2).

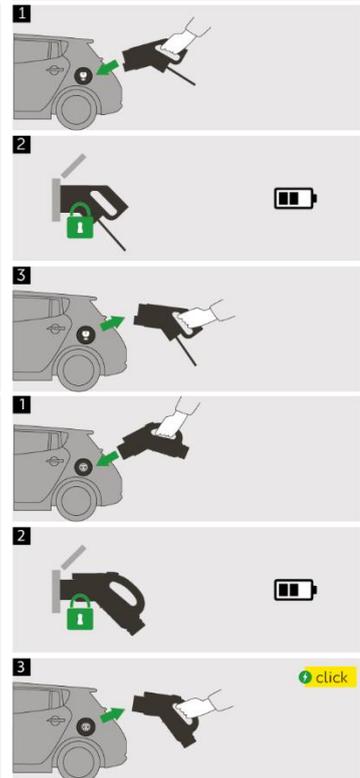

GB/T (DC)



5.3 SAFETY MEASURE

The output cable is connected via cable sleeve / cable glands.

On the lower panel of the station there is an emergency stop button. When the emergency stop button is pressed, the electrical circuit that powers the vehicle's battery is automatically disconnected. The message "EMO PRESSED" appears on the display.

To continue the operation of the station, the emergency stop button must be manually returned to its original state (turn the button counterclockwise).

6 MAINTENANCE



WARNING!

Improper maintenance can result in serious injury or equipment damage. The charging station can be maintained and repaired by qualified personnel only.



CAUTION!

The use of explosive or flammable cleaning agents presents a fire or explosion hazard.

Do not store flammable or explosive liquids near the charging station!



WARNING!

The charging station should always be powered off and disconnected from the power grid during the maintenance and repair.



INFORMATION

It is recommended to carry out regular maintenance of the charging station.

Only the manufacturer, an authorized service technician, or technically qualified personnel may replace damaged charging station or its components.

In the course of operation the following maintenance are carried out:

- Visual inspection for overheating of equipment; check, pulling connections;
- Filter replacement;
- Identification of defective parts, assemblies, their repair and replacement.

Preventive inspection of the charger should be carried out at least once every 3 months. To do this, the charger must be disconnected from live circuits and its housing, contacts and vents must be thoroughly cleaned of dust and dirt, and the quality of wire fastening must be checked. Screws of terminal blocks and wire ends must be clamped, the wires must not have damaged insulation.

The filters of the station must be replaced at least once a year. When the charging station is operating in conditions of increased dustiness, it is recommended to carry out extraordinary routine maintenance for preventive cleaning of the internal elements of the station from dust at least once every 3 months.

It is recommended to use synthetic air filter media grades G3 with 20 mm thicknesses as the filter material.

It is strictly forbidden to change or make changes to the structure of the station in any way without the written consent of the manufacturer!

All signs, stickers and pictograms placed on the station must be visible and readable. Marks, labels or pictograms that have been damaged or illegible must be replaced immediately. Please contact the manufacturer to agree on such issues.

7 TROUBLESHOOTING

Failure mode	Potential cause	Remedy
Lost connection with server	Modem failure / SIM card inoperative	Contact to Customer Service to replace the modem / check the status of the SIM-card
	Poor mobile signal strength / Station is out of range of the mobile network / Modem antenna is out of order	Contact to Customer Service to replace antenna with a more powerful
Charging cable or connector fault	Depreciation, careless handling of equipment	De-energize the device. Contact to Customer Service to replace charging cable or connector.
The charging station display does not work (there is no information on the station display)	No input voltage	Find out the reason for the lack of voltage. Restore power supply.
	Circuit breaker(s) tripped off	Bring circuit breaker(s) to operating position
	Display is out of order	Contact to Customer Service
Other malfunction	Malfunctions caused by external and internal factors	Contact to Customer Service

CUSTOMER SERVICE

You can write an email or call to the tech support using the contact page on our web-site

AUTOENTERPRISE.UA

In order to solve the problem quickly, you must provide the station modem number or station number in the Autoenterprise billing.

8 STORAGE

The charging station is supplied in individual factory packaging. Remove all packaging before installing the station.

STORAGE CONDITIONS:

- The charging station must be stored in its original packaging.
- The charging station should be stored in dry heated rooms, free of dust, corrosive and oily materials.
- Keep the charging station in the warehouse with the appropriate weather protection.
- Keep away any sharp object from the charging station, cords or plugs/connectors.
- During storage, the charging station must be protected from shocks.
- Avoid extreme temperature fluctuations.
- Storage temperature range: 0 °C to +40 °C (32 °F to 104 °F).
- Humidity: < 85%.

9 TRANSPORTATION

The charging station can be transported by all means of transport. During transportation, take all necessary measures to ensure protection from atmospheric precipitation, mechanical damages and movements. Protect the charger from damage during transportation with straps and inserts, and leave sufficient clearance between the station and other transported items.

Shipping temperature range: 0 °C to +40 °C (32 °F to 104 °F).

10 DISPOSAL



ATTENTION!

The symbol with the crossed-out waste container means that electrical and electronic devices, including their accessories, must not be disposed in the household garbage!

Please observe the regulations regarding disposal of electric appliances and electronic devices!

Electronic components of the charging station must be disposed in accordance with the current legislation regarding the disposal of electronic and electrical waste.

11 FAT CERTIFICATE

THE CHARGING STATION

<small>PRODUCT NAME</small>	
TRAVEL CHARGER	XXXXXXXXXX
<small>MODEL/MODIFICATION</small>	<small>SERIAL</small>
manufactured and accepted in accordance with the requirements of EN 61851-1, EN 61851-23 and recognized as fit for use.	
<small>STANDARD</small>	

Quality Control Department

LS

SIGNATURE

FULL NAME

DATE

11.1 ADDRESS OF MANUFACTURER:

PC "AE FACTORY"

6, Hryhoriia Rudyka Str., Kharkiv, Ukraine, 61070

Phone: +38 097 535 7777

12 LIMITED PRODUCT WARRANTY

This Limited Product Warranty ("Warranty") applies to the charging station Travel Charger ("Station") purchased from manufacturer or one of its authorized distributors.

Subject to the exclusions set forth below, manufacturer warrants that the Station will be free from defects for a period of two (2) year after the date of delivery manufacturer's warehouse ("Warranty Period"), unless manufacturer and its direct customer ("Customer") explicitly agree otherwise in writing.

Customer may transfer the Warranty to its customers ("Station's Owner" or "Owner").

WARRANTY SERVICE

Within the Warranty Period, upon verification of a warranty claim, manufacturer will, at its sole discretion, repair or replace broken component (that was damaged in normal use) at no charge to Owner for material and/or labour. Owner pays any transportation costs associated with the

replacement / repair of components (to the manufacturer factory or any other repair location indicated by manufacturer).

If the repair issue cannot be resolved remotely, Owner shall, at its own expense, ship the Product(s) to a Repair Centre, after receipt of respective instructions.

To obtain the necessary instructions, you must contact to Customer Service at autoenterprise.ua.

Owner assumes risk of any shipping related loss or damage.

If the fault is covered by this Warranty, manufacturer will repair or replace the Product(s) and ship it back to the Owner via ground transportation at manufacturer's cost.

The out-of-warranty Station or station ineligible for warranty service will be repaired or replaced at Owner's request according to the preliminary agreement on payment and shipped back at Owner's expense.

All replaced parts are the property of manufacturer.

The warranty does not apply to equipment damaged as a result of:

- incorrect electrical, mechanical connection;
- misuse or Station usage beyond its intended purpose;
- modification or changes in the design of the product without written manufacturer approval;
- incorrect installation, assembly/disassembly or relocation of the Station unless performed by manufacturer or authorized service personnel;
- maintenance and repair of product performed by an unauthorized or unqualified personnel;
- failures from the grid;
- external damages (including physical damage from being struck by a vehicle) or violation of the rules of transportation and storage;
- use of interfaces or parts not provided by manufacturer;
- accidents, acts of nature or other causes beyond manufacturer's control;
- vandalism.

The manufacturer is not responsible for the possible costs associated with the installation and removal (dismantling) of the warranty equipment, as well as for damage caused to other equipment in the possession of the consumer, as a result of malfunctions (or defects) arising during the Warranty period. Furthermore, damage to the electrical vehicle itself is never covered by this Warranty.

Manufacturer or its authorized distributors will not be liable for any indirect, incidental, special, punitive or consequential damages, even if manufacturer knew or should have known of the possibility of such damages.

The cumulative liability of manufacturer or its authorized distributors for all claims whatsoever related to this station or the service will not exceed the price of this station.

ADDITIONAL INFORMATION

Owner is responsible for the proper installation and maintenance of the Station.

This Limited Product Warranty is not transferable by the Station's Owner to anyone else.

PC "AE FACTORY" reserves the right to update any information, illustrations, sheets, specifications and diagrams contained in these Manual at any time without prior notice in respect of technical developments.

All inquiries or claims made under this Limited Product Warranty must be address as follows: autoenterprise.ua.